

iAudio X5 OTG Liste

Unterstützte Geräte

nicht unterstützte Geräte

Kameras

• Agfa

• Canon

- Canon Powershot A70
- Canon Powershot A75
- Canon Powershot A80
- Canon Powershot A85
- Canon Powershot A95
- Canon Powershot A410
- Canon Powershot A510
- Canon Powershot S45
- Canon Powershot S50
- Canon Powershot S70
- Canon Powershot S230
- Canon Powershot S410
- Canon Powershot S500
- Canon Powershot S510 (ixus 510)
- Canon Powershot G2 (conflicting statements in thread, device may not work)
- Canon Powershot G3
- Canon Powershot G5
- Canon Powershot G6
- Canon Powershot S1
- Canon Powershot S2 IS
- Canon Powershot Pro 1
- Canon Ixus II
- Canon Ixus 30
- Canon Ixus 40
- Canon Ixus 400
- Canon Ixus 700
- Canon SD20
- Canon SD300
- Canon SD400
- Canon SD500
- Canon EOS 20D
- Canon EOS 350
- Canon Rebel D300
- Canon Elura 50
- Canon Ixus 330
- Canon S30
- Canon Powershot A10
- Canon PowerShot A20
- Canon PowerShot A40
- Canon S50 (conflicting reports)
- Canon Digital IXUS Ai-AF

• Casio

- Casio P505
- Casio EX-Z55
- Casio Z750
- Casio Exilim EX-S500
- Casio EX-S100
- Casio QV-R41
- Casio Z50

- **Contax**

- **Epson**

- **Fujifilm**

- Fuji A205
- Fuji A330
- Fuji E550
- Fuji F11
- Fuji F170
- Fuji F420
- Fuji F450
- Fuji F455
- Fuji F610
- Fuji S3Pro
- Fuji S3100
- Fuji S5000
- Fuji S5100
- Fuji S7000
- Fuji Z1
- Fuji F10
- Fuji F30
- Fuji F401
- Fuji E550
- Fuji A201
- Fuji A203
- Fuji A303
- Fuji 3800
- Fuji 4900 Zoom
- Fuji 6900Z
- Fuji S602Zoom

- **Hewlett Packard**

- HP Photosmart 443
- HP Photosmart R507
- HP M307
- HP R707
- HP photosmart 812
- HP-R707
- Photosmart 120
- HP Photosmart 735

- **JVC**

- JVC Everio GZ-MC100US

- **Kodak**

- Kodak EasyShare DX6340
- Kodak EasyShare CX7530
- Kodak DX7440
- Kodak Z730
- Kodak Easyshare DX6440
- Kodak Easyshare 7300

- **Konica Minolta**

- Minolta Dimage A1
- Minolta Dimage 7i
- Minolta Dimage G400
- Minolta DiMAGE Xt
- Konica Minolta G500
- Konica Minolta Dynax/Maxxum 5D
- Konica Minolta Dimage Z1

- Konica Minolta Dimage Z2
- Konica Minolta Dimage Z3
- Konica Minolta Dimage Z10
- Konica Minolta Dimage Z20
- Konica Minolta Dimage Z2 (also reported as working..?)
- Konica Minolta Dimage Z3 (also reported as working..?)
- Konica Minolta Z5
- Konica Minolta Z3

- **Kyocera**

- Kyocera Finecam S3
- Kyocera Finecam S5R
- Kyocera Finecam M410R

- **Leica**

- Leica DIGILUX 1

- **Nikon**

- Nikon Coolpix 2000
- Nikon Coolpix 2100
- Nikon Coolpix 2500
- Nikon Coolpix 3700
- Nikon Coolpix 4200
- Nikon Coolpix 4300
- Nikon Coolpix 4500
- Nikon Coolpix 4600
- Nikon Coolpix 5200
- Nikon Coolpix 5400
- Nikon Coolpix 5600
- Nikon Coolpix 5900
- Nikon Coolpix 7900
- Nikon Coolpix 8700
- Nikon Coolpix 8800
- Nikon Coolpix SQ
- Nikon Coolpix 885
- Nikon Coolpix 950
- Nikon Coolpix 995
- Nikon D50
- Nikon D70
- Nikon Coolpix 990

- **Olympus**

- Olympus Camedia C-2Z
- Olympus C-70 Zoom
- Olympus C-220 Zoom
- Olympus C-300 Zoom
- Olympus C-350Z
- Olympus C-4000Z
- Olympus C-40Z
- Olympus C-4050
- Olympus C-5050 (and C5050z)
- Olympus C-60Z
- Olympus C-720
- Olympus C-750 UltraZoom
- Olympus C-760
- Olympus C-765 UltraZoom
- Olympus C-760 UltraZoom
- Olympus C-770 UltraZoom
- Olympus C-8080
- Olympus D-40
- Olympus D-230
- Olympus E-20P

- Olympus E-300
- Olympus SP 310
- Olympus SP 320
- Olympus SP 350
- Olympus SP 500 Zoom
- Olympus X-705
- Olympus mu Mini
- Olympus mu 300 Digital
- Olympus mu 410 Digital
- Olympus 5060wz
- Olympus Stylus 300 Digital

- **Panasonic**

- Panasonic sv-av30 (requires AC-Adapter)
- Panasonic DMC-FX7
- Panasonic DMC-FZ3
- Panasonic DMC-FZ5
- Panasonic DMC-FZ10
- Panasonic DMC-FZ20
- Panasonic DMC LX1EG

- **Pentax**

- Pentax Optio WPi
- Pentax Optio 33LF
- Pentax Optio MX4
- Pentax Optio SV
- Pentax Optio 550
- Pentax Optio 555
- Pentax Optio S4
- Pentax Optio S
- Pentax Optio 5si
- Pentax Optio 50

- **Philips**

- Phillips Key010-17

- **Ricoh**

- Ricoh Caplio R2
- Ricoh Caplio RX

- **Samsung**

- Samsung Kenox Alpha5
- Samsung Digimax i5 (known as #1 in Asia)
- Samsung Digimax V5

- **Sanyo**

- SANYO Xacti VPC-S1

- **Sigma**

- **Sony**

- Sony DSC-S60
- Sony DSC-F88
- Sony DSC-F707
- Sony DSC-F717
- Sony DSC-F828
- Sony DSC-T1
- Sony DSC-T3
- Sony DSC-T7
- Sony P200
- Sony DSC-H1 (conflicting statements in thread)
- Sony DSC-33

- Sony DSC-P1
- Sony DSC-P2
- Sony DSC-P9
- Sony DSC-P10
- Sony DCS-P31
- Sony DSC-P32
- Sony DSC-P43
- Sony DSC-P52
- Sony DSC-P71
- Sony DSC-P72
- Sony DSC-P73
- Sony DSC-P92
- Sony DSC-P100
- Sony DSC-M1
- Sony DSC-W1
- Sony DSC-V1
- Sony DSC-V3
- Sony DSC-W5/W15 (W7/W17 expected to work as well)

- **Toshiba**

- **Other**

- Daisy Multimedia DM334
- Yakumo Mega-Image 47sx

MP3-Players

- **Apple**

- Apple iPod Shuffle
- Apple iPod Generation 3
- Apple iPod Generation 4
- Apple iPod Mini (6 gb)

- **Archos**

- Archos AV420
- Archos gmini XS 202

- **Cowon**

- Cowon iAudio 4
- Cowon iAudio X5/X5L
- Cowon iAudio M3/M3L
- Cowon iAudio U2
- Cowon iAudio G3
- Cowon iAudio 5
- Cowon iAudio F1
- Cowon iAudio U3
- Cowon A2

- **Creative**

- Creative MuVo² 4GB
- Creative Zen Touch
- Creative MuVo TX FM

- **iRiver**

- iRiver H340
- iRiver H140
- iRiver H120
- iRiver PMP-120
- iRiver H10 (Intl. Version Only)

- **MSI**

- MSI Megaplayer 515 256MB

- **Rio**

- Rio Carbon
- Rio Karma

- **SanDisk**

- SanDisk Sansa m240
- SanDisk Sansa e130

- **Samsung**

- Samsung YP-C1
- Samsung Yepp YP-T7
- Samsung Yepp YP-T5
- Samsung YH - J70

- **Sony**

- Sony PSP with 1.50 firmware
- Sony PSP with 2.00 firmware

- **Toshiba**

- Toshiba Gigabeat

- **Other Brands**

- kStor i.Beat Rock

- Jens Of Sweden MP-100
- JoS (Jens Of Sweden) MP-300
- Smartdisk Flashtrax 40gb MP3 media player
- Acer MP-320 20GB
- Lifetec Generic MP3 Player
- MyMusix PD-205
- Thomson PDP2860
- Qonix MP3 Player 512 MB
- iops (Korean manufacturer) X5
- Maxfield G-Flash

Kartenleser

- A-TED CR-V1002-U26
- CompUSA 9in1 card reader
- Dazzle Hi-Speed 8 in 1 Reader/Writer from Zio Corporation
- SanDisk ImageMate 12 in 1 card reader
- SanDisk ImageMate 8-in-1 Reader/Writer
- SanDisk Imageready Compact Flash Type I & II reader
- SanDisk SecureMate (SDDR-33)
- SanDisk ImageMate (SDDR-93-E15)
- SanDisk ImageMate Dual Reader (SDDR-77)
- SanDisk ImageMate USB 2.0 CF I+II (SDDR-91-x 15)
- Sandisk MoibleMate SD+
- Filand 20 in 1 Card Reader (CRER-20R)
- Sitecom USB 2.0 Card Reader
- Sweex 8-in-1 USB 2.0 Card Reader
- Transcend 7-in-1 card reader
- PQI Multi-Slot memory card reader (CF & MicroDrive)
- Fuji finepix XD-card reader
- Hama Traveldrive 12in1 USB 2.0 (CF slot only)
- MediaGear MGTR-400 7 in 4 Reader/Writer
- MediaGear 8 in 4 USB 2.0 Reader/Writer
- Dane-Elec USB2 combo 9-in-4 card reader
- FujiTech / ProDige 23in1 Card Reader (ECR23-USB2)
- IOGear USB 2.0 Universal Memory Card Reader - Writer (SD & MMC Flash Cards)
- Siig 6 in 1 usb 1.1 reader
- Sabrent 16 n 1 USB 2.0
- Trust CR-1200 Card Reader 16in1
- Dazzle 6-in-1 Card Reader (USB1)
- SanDisk ImageMate SDDR-05 Flash I/II Reader/Writer
- Lexar 2.0 Multi-Card Reader RW018
- SWEEX 16-in-1 Card Reader
- illumFX USB 2.0 HUB with Card Reader/Writer
- PQI Travel Flash USB Reader (Model# USNB3F07)
- Zynet 8-in-1 card reader
- Bonzai SD Card Reader

Externe Harddisks / Memory Speicher

- Fellow 0303
- SanDisk Cruzer Mini
- SanDisk Cruzer Micro
- Iomega HDD 120 Go USB2.0
- SMART model no SM9FLAU (128 MB Memory stick from DELL)
- PQI Intelistick 2.0
- TrekstorDataStation maxi x.u 250GB
- Lexar JumpDrive Sport
- Avixe 512mb USB thumb
- R-DRIVER II ide to USB interface
- Lexar Jumpdrive Sport 1GB
- M-Sys DiskOnKey USB Device 256MB
- Medion USB64S
- Sony Micro Vault USM-E 512MB
- Kingston Data Traveller 256Mb
- Akai MPC 1000
- TinyDisk 128MB
- Iomega 60GB USB 2.0 (PHD60-U)
- Fujitsu Siemens Memorybird
- Sony Micro Vault pen drive
- Memorex TravelDrive
- Kingston DataTraveler
- La Cie Big Disk (500GB) External Harddisk
- Corsair Flash Voyager 2gb
- Corsair Flash Voyager 128MB
- WD Passport 60GB external HDD
- Kingston Data Traveller 512MB
- Maxtor Onetouch 120Gb
- PEAK 512 MB Flash drive

PDA & Mobiltelefone

- Palm Tungsten T5
- Dell Axim X30
- Tapwave Zodiac with Softick Card Export II
- Nokia 6280
- Palm Zire72
- K750i from Sony Ericsson
- Siemens CX70

Weitere Geräte

- PowerDisk flash memory/MP3 player wristwatch
- XONIX USB Watch